

POWER CABLE, PLUGS AND SOCKETS

SPACEWISE BUTCHER DOOR UNITS REQUIRE 3 PHASE 440 VOLT 5 PIN POWER SUPPLY. 3X PHASE 1X EARTH CONNECTION 1X NEUTRAL CONNECTION.

The R.C.D. should be fitted with a 32 amp Type “C” or “D” motor rated breaker to prevent the switch from tripping during machine start up.



Spacewise will provide extension leads if required, complete with plug and sockets, however there is normally a charge for this item.

Spacewise commissioning / service engineers are equipped to test the supply and will advise if the socket needs replacement or a defect is found. Spacewise is unable to undertake replacement or repair to any stores power supply.